


## How to adjust the N2 pressure sensor.

The N2 pressure sensor is located on the flow meter manifold, behind the flow meters.

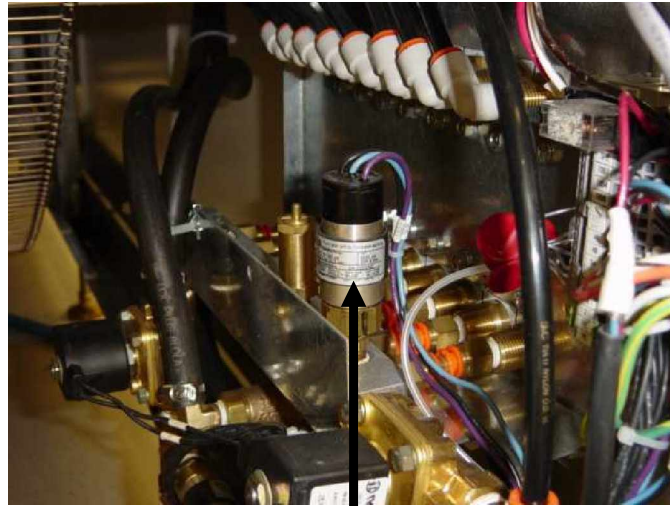

Pressure sensor

The pressure sensor has a cover that slides to reveal the adjustment mechanism.

Turn the mechanism to right (counter-clockwise) to decrease the amount of pressure required to close the contacts, or turn the mechanism to the left (clockwise) to increase the amount of pressure required to close the contacts.



Adjustment Mechanism